



## **INSTALLATION INSTRUCTIONS**

**PART NUMBER: DDR19-100 GRILLE GUARD  
DDR19-PB PUSH PAR**

**APPLICATION: 2019+ DODGE DURANGO PURSUIT**

<b>QTY</b>	<b>PARTS LIST</b>
<b>1</b>	<b>DDR19-100TVI/PB</b>
<b>8</b>	<b>½" x 1 ½" HEX HEAD BOLTS</b>
<b>2</b>	<b>½" HEX NUTS</b>
<b>10</b>	<b>½" FLAT WASHERS</b>
<b>8</b>	<b>½" LOCK WASHERS</b>
<b>2</b>	<b>¼" x ¾" FLANGE BOLTS</b>
<b>2</b>	<b>¼" EXTRUDED "U" NUTS</b>
<b>2</b>	<b>8MM X 50MM BOLTS</b>
<b>2</b>	<b>8MM LOCK WASHERS</b>
<b>2</b>	<b>3/8" FLAT WASHERS</b>
<b>1</b>	<b>DDR19-100 UPPER MOUNT</b>
<b>1</b>	<b>DDR19-100 LOWER RIGHT MOUNT</b>
<b>1</b>	<b>DDR19-100 LOWER LEFT MOUNT</b>
<b>2</b>	<b>DDR19-100 RADIATOR SUPPORTS</b>

**\*\*Inspect bumper and all parts prior to installation.**

### **-WARNING-**

Special care should be exercised in the handling and installation of our products.

- Always wear safety glasses during installation process to avoid personal injury.
- Use extreme caution when lifting and securing product into place.
- Never position yourself directly under product during installation.
- Insulate all exposed wiring and electrical connectors.
- Always securely mount wiring harness to bumper and vehicle.
- Products may require minor trimming for proper fit.
- Periodically check nuts and bolts to make sure they remain tight.

# 2019+ Dodge Durango Pursuit Grille Guard / Push Bar Installation Instructions

1. Remove 4 push pins and lift the plastic grille cap to unsnap.



2. Remove the 2 plastic rivets and the 10mm bolt at each wheel well.



3. Pull out on the wheel flare to unsnap.



4. Remove the five 8mm bolts that attach the wheel well liner to the front bumper skin.



5. Remove the three 10mm bolts located at the bottom of the bumper skin.



6. Remove the two 13mm bolts that hold the front of the transmission skid plate.



7. Remove the push pin at the center.



- Pull at the edge of each wheel well to unsnap bumper skin from the fender and underneath the headlight. Reach between the bumper skin and the wheel well liner to disconnect the fog light wiring harness on the passenger side. Remove the skin.



- Remove the two 13mm bolts that attach the radiator support struts to the radiator support.



- Remove the two 10mm bolts located on the internal bumper.



- Remove the four 13mm bolts that attach to the internal bumper and remove.



12. Remove the two 8mm bolts that attach the lower support struts.




13. Trim plastic radiator duct work as shown. Reinstall internal bumper by starting at the bottom bolt and setting upper mount on to the started bolts and tighten bolts back to original position.



14. Install new radiator support struts attaching to the upper mount, using the provided 1/2" hardware on lower end of strut.



15. Trim brake duct work and rear bumper skin mount as shown in the photo. Trim duct work 4 1/2" and 7 1/2" (see picture).

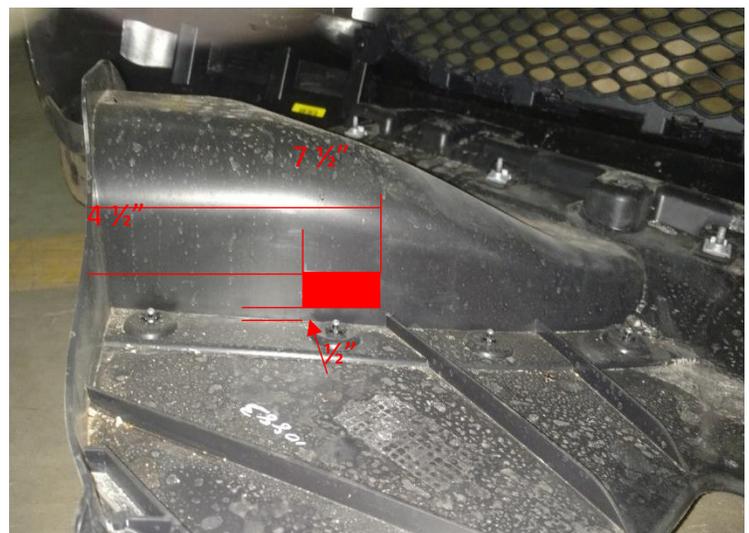

16. Reinstall bumper skin by snapping the plastic grill cap on first. Proceed to snap the skin back to the fenders and underneath the headlight.
17. Plug in the wiring harness.
18. Snap fender flares back in place and reinstall the five 8mm bolts attaching to the inner wheel well liner to the bumper skin.
19. Reinstall the three 10mm bolts at the bottom of the bumper skin.
20. Install the guard onto the mount. Install the 6 ½" bolts into the upper mount.
21. Slide the lower mounts in from the rear of the bumper skin through the brake duct work and reattach transmission skid pan with the lower mount sandwiched.
22. Attach front of the lower mount.